

IX.4.3C-USER PREPROCESSOR PARAMETRIC DATA BASE PARAMETER ARRAY USER:
 USER GENERAL PARAMETERS

Purpose

Parameter array USER contains general user parameters.

Array Contents

<u>Starting Position</u>	<u>Dimension</u>	<u>Type</u>	<u>Input/Generated</u>	<u>Description</u>
1	1	I*4	G	Parameter array version number
2	1	A8	I	User name
4	2	I*4	I	Beginning month of summer and winter seasons for program FCST Function MAP
6	1	I*4	I	Subset of MDR grid being used: o western most column o number of columns o southern most row o number of rows
7	1	I*4	I	
8	1	I*4	I	
9	1	I*4	I	
10	1	R*4	I	Latitude and longitude limits; units of decimal degrees: o northern latitude o southern latitude o eastern longitude o western longitude
11	1	R*4	I	
12	1	R*4	I	
13	1	R*4	I	
14	1	R*4	I	Elevation limits; units of M: o maximum elevation o minimum elevation
15	1	R*4	I	
16	1	I*4	I	Blend period for program FCST Function MAT computations; units of DAY
17	1	I*4	I	Blend period for program FCST Function MAPE computations; units of DAY
18	1	I*4	G	Program FCST Function MAP status indicator: 0 = complete and program PPINIT command ORDER run 1 = MAP areas defined but program PPINIT command ORDER not run 2 = incomplete

<u>Starting Position</u>	<u>Dimension</u>	<u>Type</u>	<u>Input/Generated</u>	<u>Description</u>
19	1	I*4	G	Program FCST Function MAT status indicator: 0 = complete 1 = incomplete Default values of exponent in 1/D**POWER for area definitions:
20	1	R*4	I	o MAP
21	1	R*4	I	o MAT
22	1	R*4	I	o MAPE
23	1	R*4	I	Minimum daily precipitation at less than 24-hour stations for estimating time distribution; units of IN
24	1	R*4	I	Minimum weight of stations to be kept when doing station weighting
25	1	A4	I	Indicator how station information is to be sorted: 'ID' = by identifier 'DESC' = by description
26	1	I*4	G	Number of user run defaults set with SAVEDFLT option of program PPINIT command SETOPT; maximum is 6
27	1	I*4	I	Maximum lines per page; set with program PPINIT command SETOPT option PAGESIZE
28	1	I*4	I	Option to begin commands on a new page; set with program PPINIT command SETOPT option NEWPAGE: 0 = no 1 = yes
29	1	I*4	I	Option to overprint error and warning messages; set with program PPINIT command SETOPT option OVERPRNT: 0 = no 1 = yes
30	1	I*4	I	Option to print log of commands executed; set with program PPINIT command SETOPT option

<u>Starting Position</u>	<u>Dimension</u>	<u>Type</u>	<u>Input/Generated</u>	<u>Description</u>
				CMDLOG: 0 = no 1 = yes
31	1	I*4	I	Unused; reserved for use by SAVEDFLT option of program PPINIT command SETOPT

The following is only in parameter arrays with a version number greater than 1:

				Subset of HRAP grid being used for processing NEXRAD precipitation data:
32	1	I*4	I	o western most column
33	1	I*4	I	o number of columns
34	1	I*4	I	o southern most row
35	1	I*4	I	o number of rows